


Kalstein®

A different accompaniment, at your service

LABORATORY LINES STEAM GENERATOR



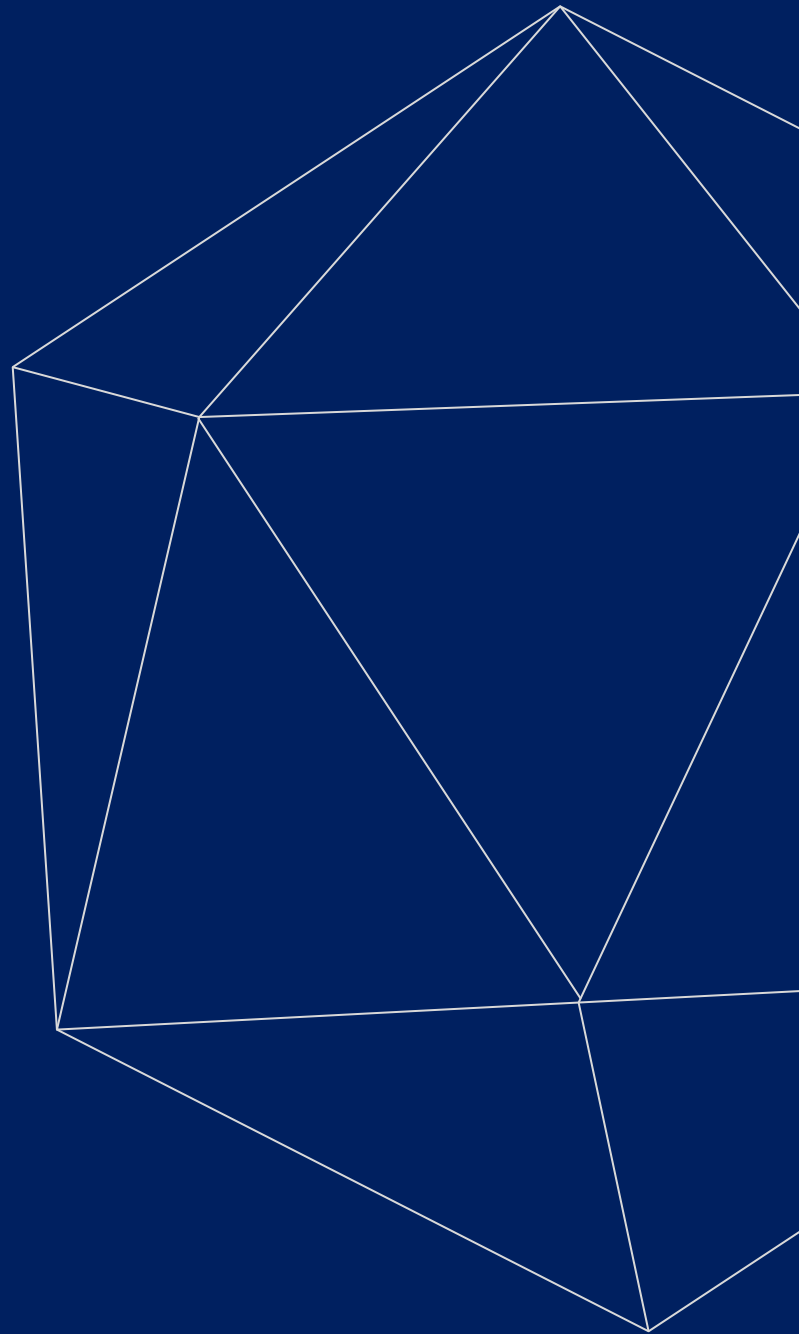

Kalstein®

A different accompaniment, at your service

OUR SERVICES

Benefits and Support

In Kalstein France, we take care of the full satisfaction of our customers, that is why we provide value-added services of the highest level based on our experience.



Online Inductions and Trainings

In any part of the world, receive your induction or training from our specialized team of engineers



Quick Response

Our work team is always available to response all your consults or questions, in order to support you in any situation.



#Letsgivemore ♥

Thanks to your purchase, a donation is made to a non-profit foundation that fights against cancer and helps vulnerable communities.



Technical Support

Enjoy of personalized advice for the correct preventive and corrective maintenance of your equipment, thanks to Kalstein's manuals and articles, special catalogues and video tutorials.



Delivery Logistics

We take care of all the necessary logistics for the dispatch of your goods, whether is by sea, land or air.



Kalstein Worldwide

With more than 25 years growing with our customers, Kalstein's multiformat and modern content, is now present in more than 10 countries and increasing.



144KW Steam Generator Series YR0144KW



Features:

- Unique internal structural design
- The product volume is less than 30L, and it is not required to apply for boiler use certificate within the scope of national boiler exemption. The built-in steam-water separator solves the problem of steam-bearing water and ensures the high quality of steam. The electric heating tube is connected with the furnace body and the flange to facilitate replacement, repair and maintenance.
- One-step electronic control system
- The boiler operating system is fully automatic control, so the control parts are all concentrated on one computer control board. When the operation is completed, only water and electricity are connected. When the key is pressed, the boiler will automatically enter the fully automatic operation state, which is safer and more worry-free. .
- Multiple chain security protection
- The product is equipped with overpressure protection such as safety valve and pressure controller verified by boiler inspection; at the same time, it has low water level protection, and the boiler will automatically stop working when the water supply is stopped. Leakage protectors make the safety of operators and equipment more secure.
- Use electricity to be more environmentally friendly and more economical
- The electric energy is absolutely free of pollution, and it is more environmentally friendly than other fuels. The use of low-valley electricity can greatly save the operating cost of the equipment.



#Let'sgive more

Thanks to your purchase, a donation is made to a non-profit foundation that fights against cancer and helps vulnerable communities.




All rights reserved © KALSTEIN France S. A. S.,
Optimum Business Center 450 Rue Baden Powell,
• 34000 Montpellier, France.
Tél: +33 467158849 / +33 680760710/ +33 663810023
<https://kalstein.eu>
KALSTEIN FRANCE, S.A. S



144KW Steam Generator Series YR0144KW



1、	Model	YR0144KW
2、	Powder	380V/50HZ
3、	Rated power	144 KW
4、	Evaporation	200kg/h
5、	Using fuel	Electric
6、	Saturating temperature	150 Celsius
7、	Work pressure	0.4Mpa
8、	Steam outlet	DN25
9、	Sewage caliber	DN25
10、	Packing Dimension	1530 x 940 x 1540mm
12、	G W	370KG

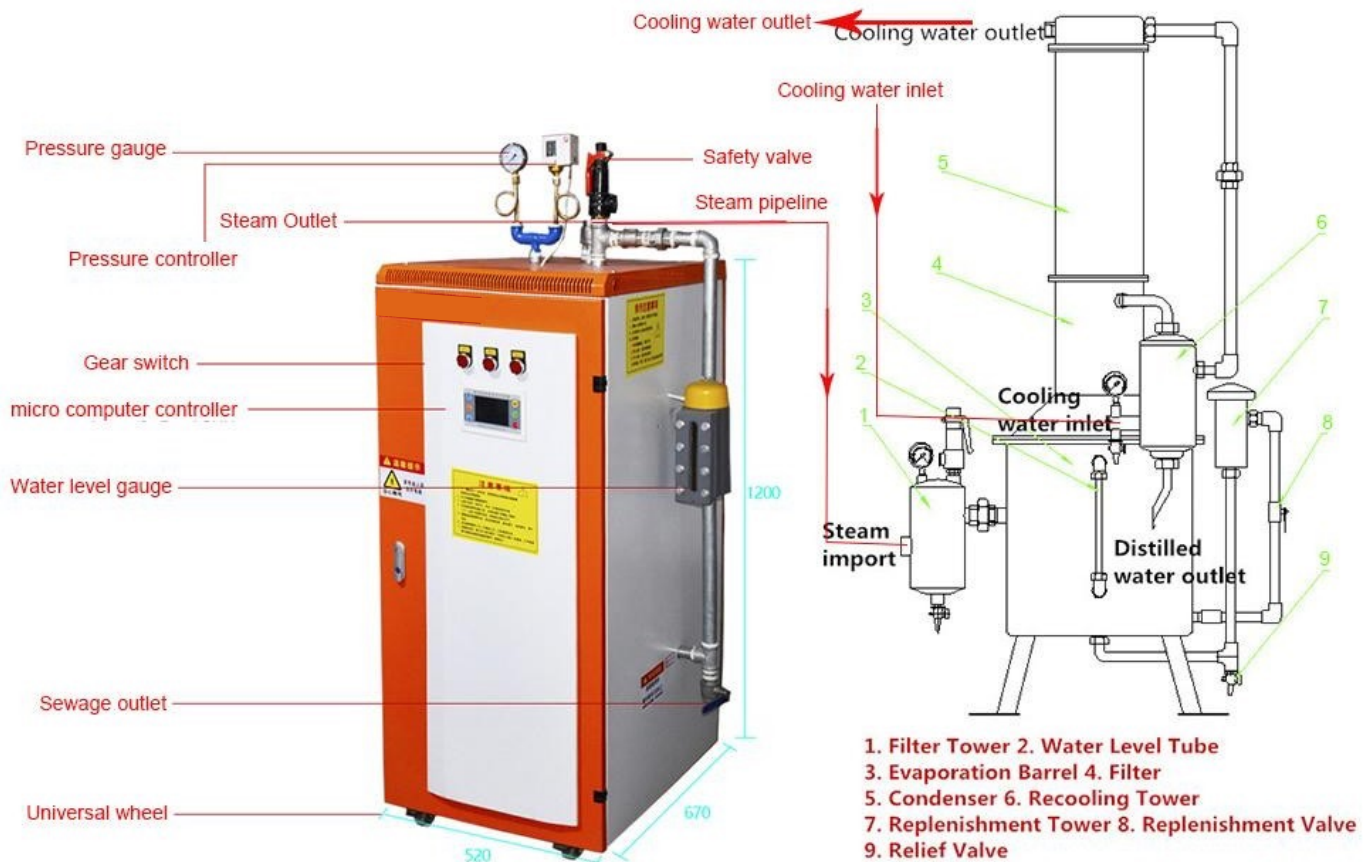

#Letsgivemore


Thanks to your purchase, a donation is made to a non-profit foundation that fights against cancer and helps vulnerable communities.



All rights reserved (© KALSTEIN France S. A. S., Optimum Business Center 450 Rue Baden Powell, • 34000 Montpellier, France.
Tél: +33 467158849 / +33 680760710/ +33 663810023
<https://kalstein.eu>
KALSTEIN FRANCE, S.A. S



Articles Kalstein
(Social Networks and Official Websites)

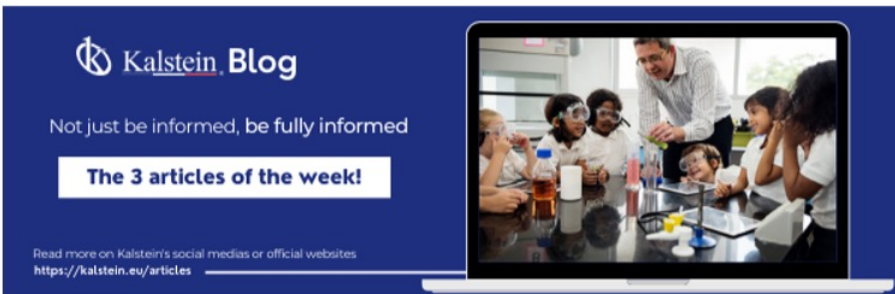

Kalstein Blog
Not just be informed, be fully informed
The 3 articles of the week!
Read more on Kalstein's social medias or official websites
<https://kalstein.eu/articles>



1
Read this ARTICLE NOW
How does the climate affect your microscope?
A microscope is an instrument that allows observing and measuring objects that are too small to be seen with the naked eye. This is achieved through a complex system of lenses and mirrors, which form...

Kalstein Blog
Article of the week:
How does the climate affect your microscope?
Read more on Kalstein's social medias or official websites
<https://kalstein.eu/articles>




2
Read this ARTICLE NOW
What is the importance of the laboratory refrigerator?
A refrigerator is a device that is one of the most used equipment in laboratories to maintain, in a controlled environment (refrigerated space), various fluids and substances...

Kalstein Blog
Article of the week:
What is the importance of the laboratory refrigerator?
Read more on Kalstein's social medias or official websites
<https://kalstein.eu/articles>

Kalstein Training Videos
(Youtube Channel and Official Websites)



Kalstein France - Jacinto Convit Foundation / Alliances
23 views • 3 years ago

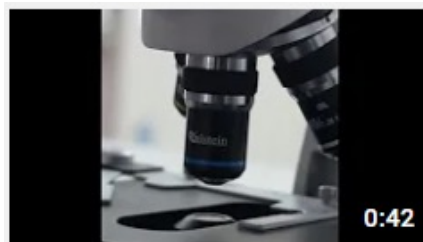

Kalstein's Microscopes
445 views • 1 week ago



MONTPELLIER - FRANCE
SEDE
Optimum Business Center,
450 Rue Baden Powell,
34000 Montpellier - France.

Fax: +33 (0) 4 67 15 88 49
Tif: +33 (0) 6 80 76 07 10
sales@kalstein.eu

<https://kalstein.eu/>
<https://www.kalstein.fr/>

Official Websites for Latin America.

